

Basic play

- 1 Power ON.**
- 2 Open the drawer and place the disc(s).**
 - Load double-sided discs so the label for the side you want to play is facing up.
 - To load discs on the other trays, press [DISC SKIP] on the main unit.
 - Play will start from the disc in the front-left position.
- 3 Close the drawer.**
 The disc indicators light when there are discs in the trays.
- 4 Start play.**

When the disc finishes playing
If the next disc doesn't start playing, select the disc.

DVD-F87 only
Press to enter the number (→ below).

1	2	3	4	5	≥10
6	7	8	9	0	CANCEL

Stop Pause

Press to skip.
Press and hold to
-search.
-slow-motion.

Stop

The position is memorized when "▷" flashes on the display.

- Press [▶] (PLAY) to resume.
- **DVD-V** To review the previous chapters (→ page 14, Position memory)
- Press [■] to clear the position.

Pause

- Press [▶] (PLAY) to restart play.

Skip

(Group skip **WMA** **MP3** **JPEG**)

Search
(during play)

Slow-motion
(during pause)

- Up to 5 steps
- Press [▶] (PLAY) to start play.
- **VCD** Slow motion, forward direction only

Frame-by-frame
(during pause)

- **VCD** forward direction only

On-screen item select

Note

- "D.MIX" on the display indicates that a multi-channel soundtrack can be down-mixed to two channels.
- Discs continue to rotate while menus are displayed. Press [■] when you finish to preserve the unit's motor and your television screen.

If you are experiencing problems, refer to troubleshooting

Enter number

RAM
DVD-A
DVD-V
VCD
CD

e.g. To select 12:
[≥10] → [1] → [2]

VCD with playback control
While stopped, press the numbered buttons.

WMA
MP3
JPEG

e.g. To select 123:
[1] → [2] → [3] → [ENTER]

- Press [CANCEL] to cancel the number(s).

Disc menu

DVD-A
DVD-V

Shows a disc top menu

DVD-V

Shows a disc menu

VCD

Shows a disc menu

Return to previous screen

Main unit display

FL SELECT

Number display
↑
Time display

Information screen

WMA
MP3
JPEG

Turns the information screen on/off

Asia, Australia and N.Z.

Standby/on switch (⏻/⏻)

Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.

Standby/on indicator (⏻)

When the unit is connected to the AC mains supply, this indicator lights up in standby mode and goes out when the unit is turned on.